DECO DECK

SUPER DURABLE Range

INSTALLATION INSTRUCTIONS

Decorative Imaging Pty Ltd
26 Barry Road
Chipping Norton
ABN 38 108 720 118

P. 02 9726 7726
F. 02 9728 4684
E. info@deco.net.au
W. www.deco.net.au

DECO DECK

SUPER DURABLE Range

SYSTEM COMPONENTS

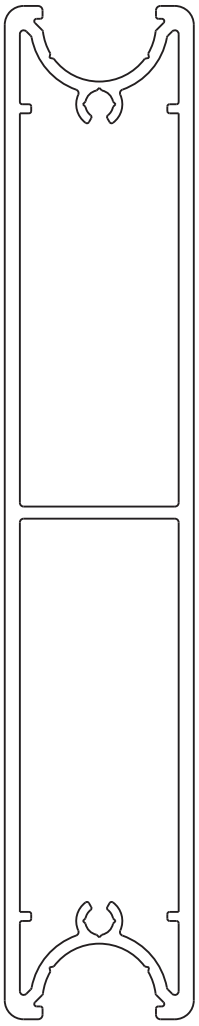

DC-DK201
Decking Plank
(134mm x 25mm)

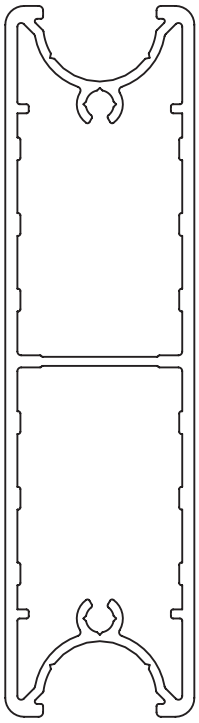

DC-DK101
Decking Plank
(94mmx x25mm)

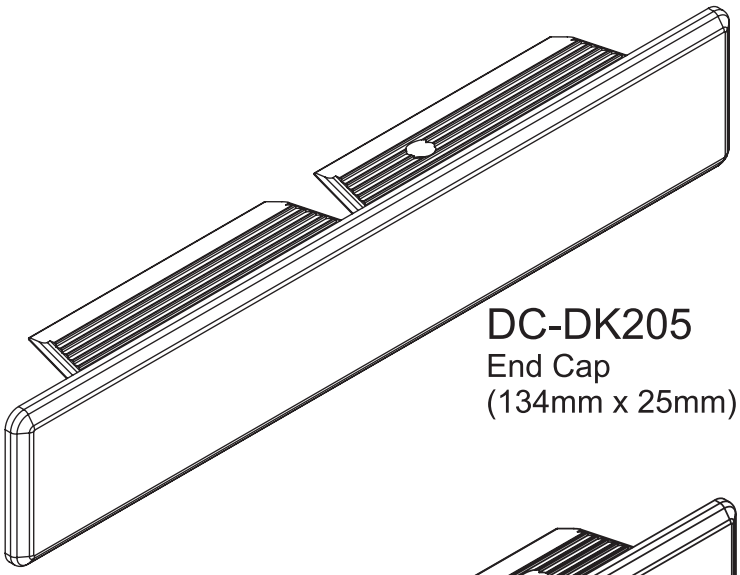

DC-DK205
End Cap
(134mm x 25mm)

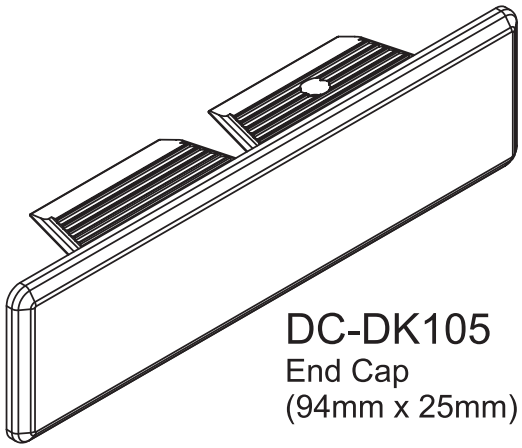

DC-DK105
End Cap
(94mm x 25mm)

DC-DK106
Cover Strip/Insert

DC-DK102
Deck Fixing
Connector

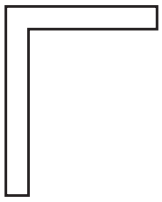

DC-ANG2025
DC-ANG2032

DC-DK104
Fixing Screw -
Wood

DC-DK114
Fixing Screw -
Metal

DC-DK103
Wall Starting
Connector



DC-DC02
32x25x3

Decorative Imaging Pty Ltd
26 Barry Road
Chipping Norton
ABN 38 108 720 118

P. 02 9726 7726
F. 02 9728 4684
E. info@deco.net.au
W. www.deco.net.au

DECO DECK

SUPER DURABLE Range

INSTALLATION INSTRUCTIONS

Step 1

Attach the DC-DK103 Wall Starting Connector to the joist

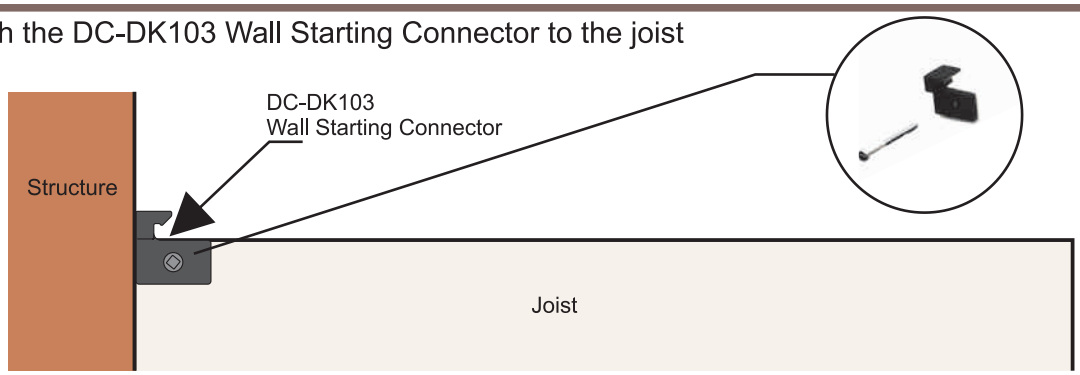

Step 2

Clip first DecoDeck™ Plank to DC-DK103 Wall Starting Connector. Use rubber mallet if necessary.

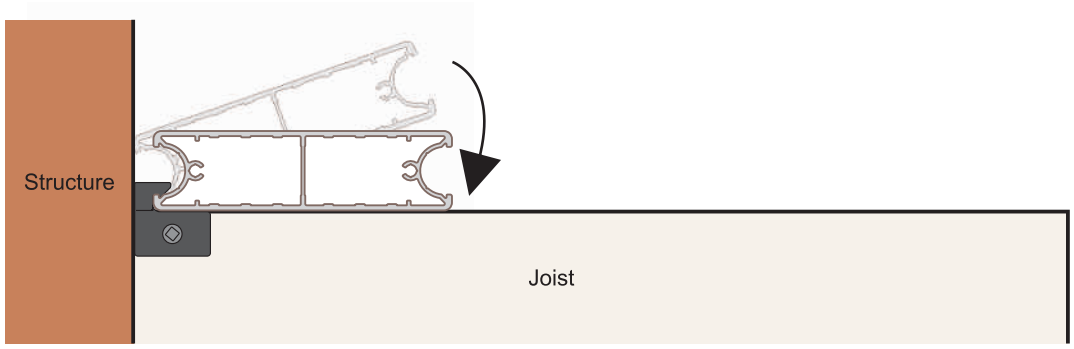

Step 3

Attach first DC-DK102 Deck Fixing Connector to the joist.

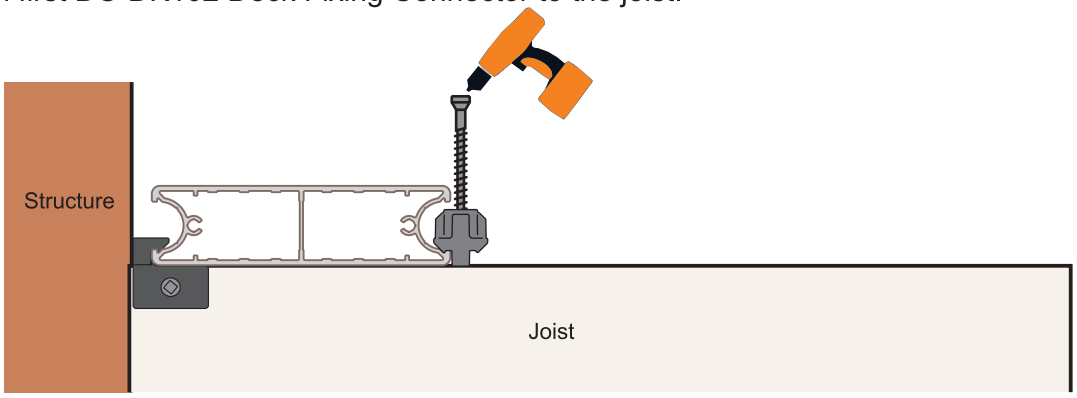

Step 4

Repeat steps 2 to 3 until decking is complete.

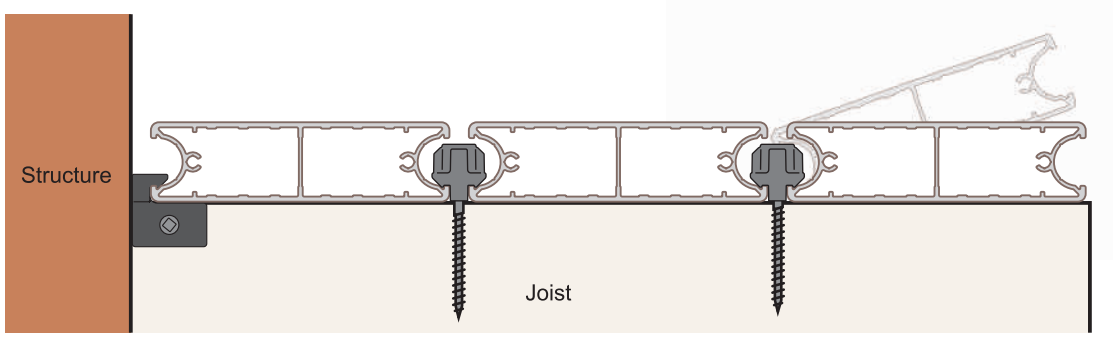

Decorative Imaging Pty Ltd
26 Barry Road
Chipping Norton
ABN 38 108 720 118

P. 02 9726 7726
F. 02 9728 4684
E. info@deco.net.au
W. www.deco.net.au

INSTALLATION INSTRUCTIONS

Step 5

Drill a hole at approximately 60 degrees into the Decking Plank using the V-groove as a guide and fix the screw through the hole into the joist.

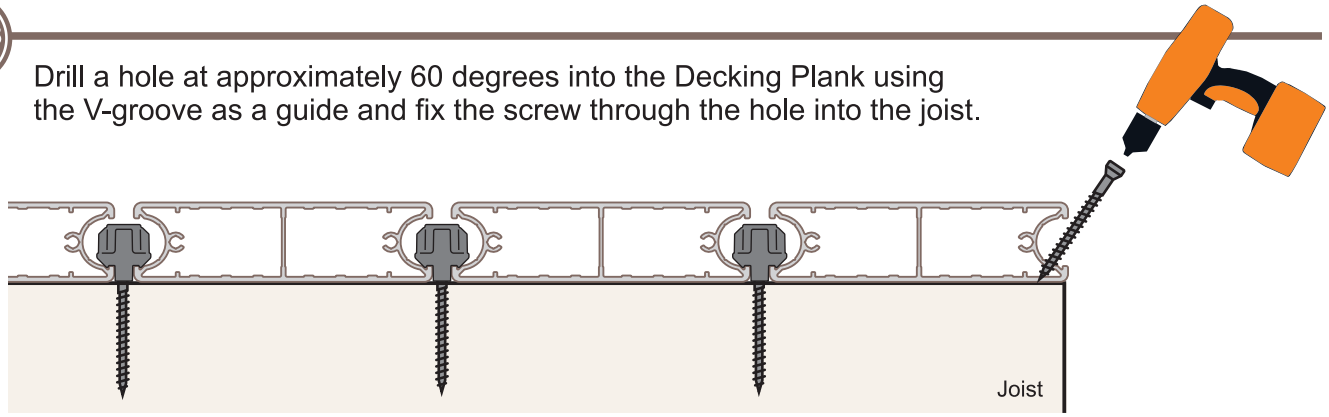

Step 6

Snap on or slide in DC-DK106 Cover Strip/Insert.
Use rubber mallet if necessary to clip in.

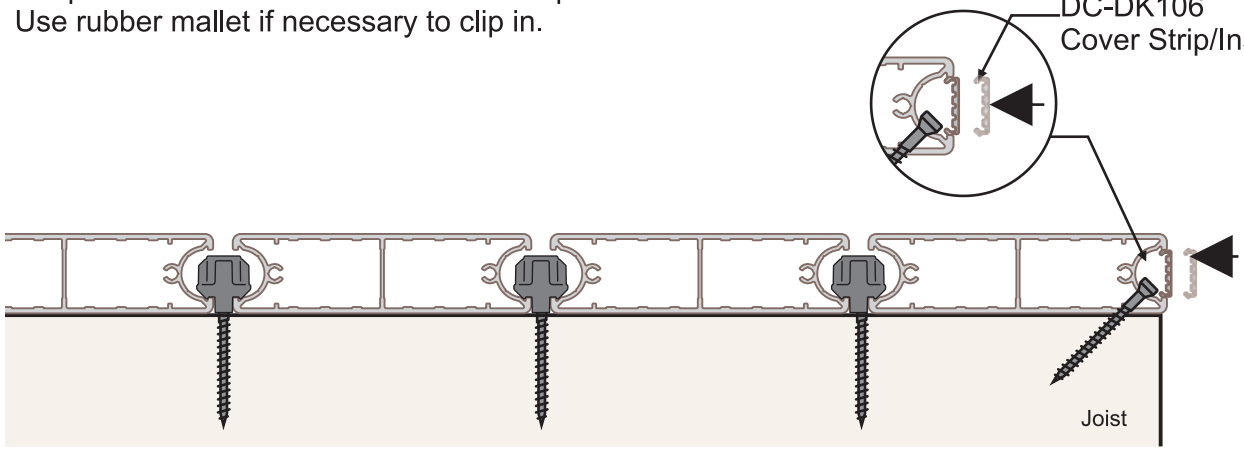

Step 7

Insert Colour Matched End Cap. Use mallet if necessary.

***Tip:** If installing around a pool apply silicone on the cut face of the Decking Plank before inserting End Cap to seal the bare metal.

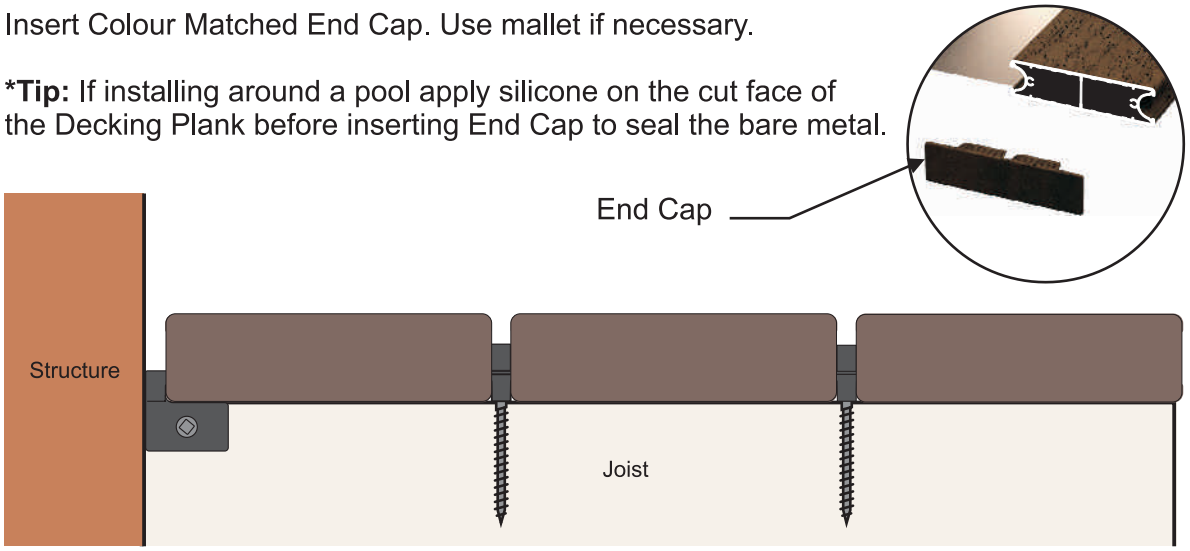

Decorative Imaging Pty Ltd
26 Barry Road
Chipping Norton
ABN 38 108 720 118

P. 02 9726 7726
F. 02 9728 4684
E. info@deco.net.au
W. www.deco.net.au

DECO DECK

SUPER DURABLE Range

TIPS AND TRICKS

A

Setting out to finish with a full decking plank at the deck edge (the last plank).
Measure to the nearest 100/140mm module, then address the gap against the wall by filling in with a DecoWood™ powder coated standard size section, eg 25x25, 25x30, 25x40, 25x50.

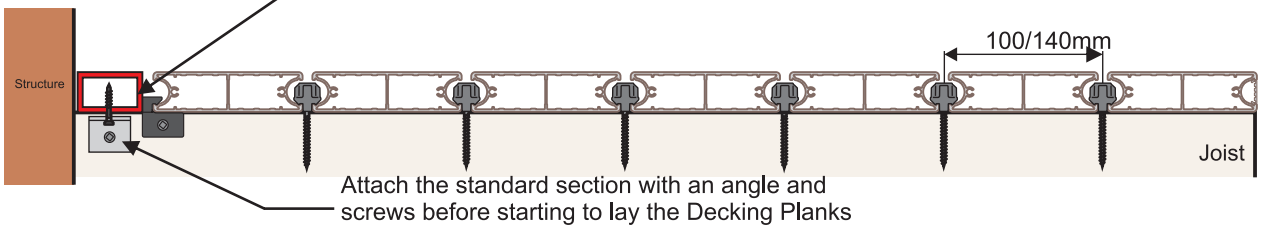

B

Setting out to finish with a full decking plank at the deck edge (the last plank).
Measure to the nearest 100/140mm module, then rip down a plank to the correct size and assemble with cut edge towards structure. The attach DC-ANG 2025 Angle with silicone.

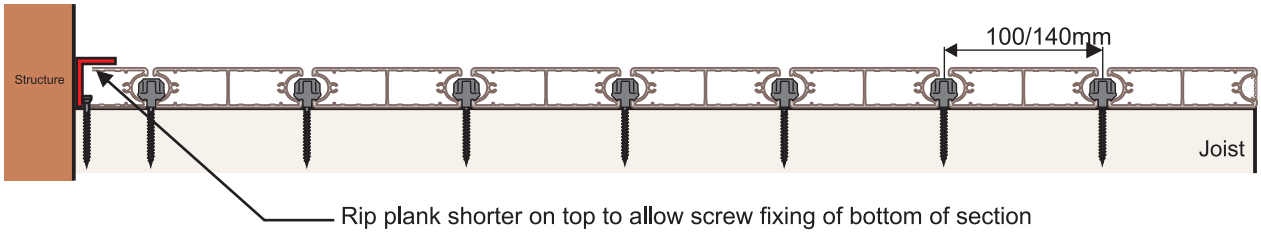

C

Building a Flame Zone-rated deck: To build a deck that is compliant with BAL 40 or Flame Zone regulations, you need to order a length of **DC-DK106 Cover Strip** to fill each gap between the boards.

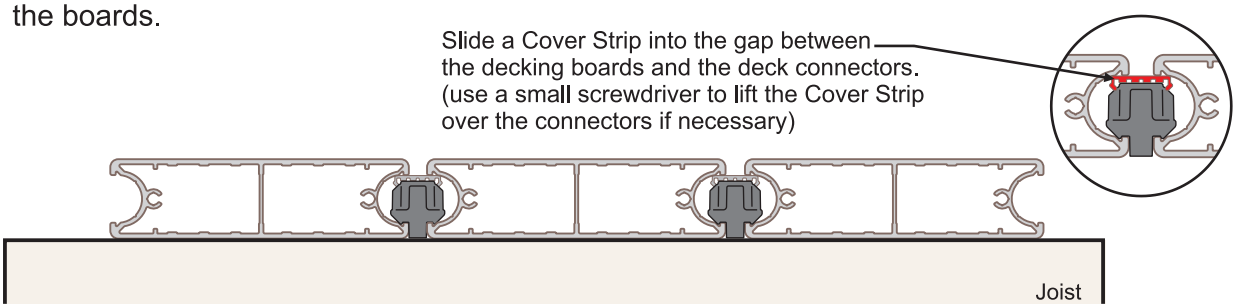

D

Joining 2 Decking Planks end to end: when joining 2 shorter lengths of Decking Plank make sure you cut the boards so the join occurs over a joist and at a connector.

Order matching powder coated DecoDeck™ joining cards
and place the card below the join,
and then screw through as normal.
The card ensures a level finish.

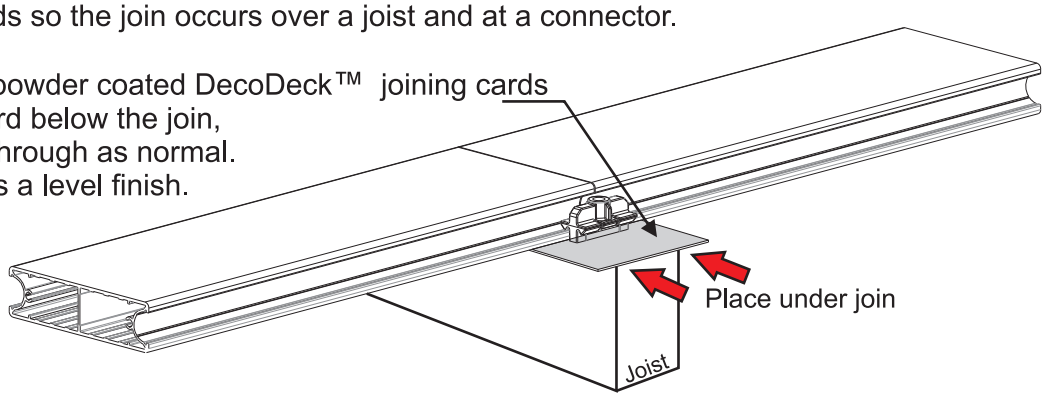

Decorative Imaging Pty Ltd
26 Barry Road
Chipping Norton
ABN 38 108 720 118

P. 02 9726 7726
F. 02 9728 4684
E. info@deco.net.au
W. www.deco.net.au

E

Sealing the ends of the planks: Instead of using End Caps, the DC-DC02 32x25x3 Channel can be attached with silicone to cover the exposed edges of a run of decking.

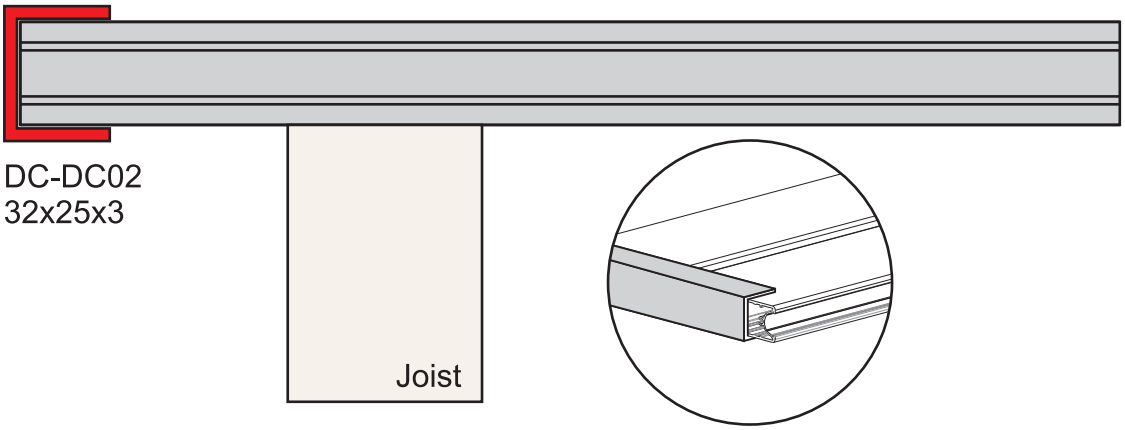

F

Dealing with Corners: An attractive way to deal with joining the Decking Planks at a corner is to use a 'herringbone' pattern rather than mitre cutting the boards.

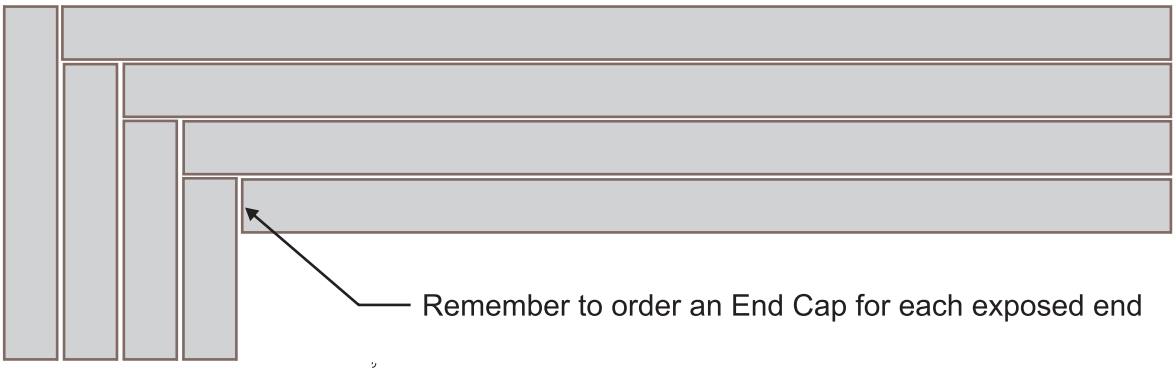

G

Dealing with Corners: When using mitre joins it is possible to join the 2 planks together by drilling through the screw flute prior to joining. NOTE: This only works with 45deg joins.

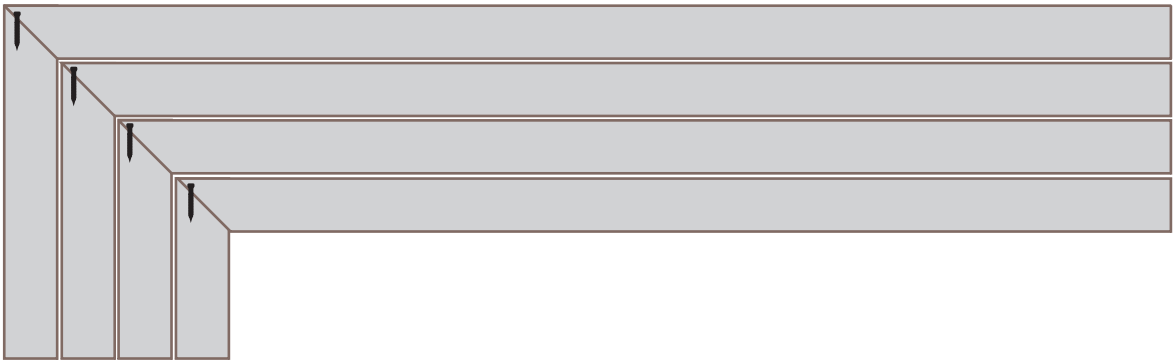

Decorative Imaging Pty Ltd
26 Barry Road
Chipping Norton
ABN 38 108 720 118

P. 02 9726 7726
F. 02 9728 4684
E. info@deco.net.au
W. www.deco.net.au